

Portable DVD Player

PET320

User manual
Manuel d'utilisation
Manual del usuario

STOP
Need help? Call us!
Philips representatives are ready to help you
CALL BEFORE YOU CONSIDER
RETURNING THE PRODUCT
1-888-PHILIPS(744-5477)
or visit us on the web at www.usasupport.philips.com



PHILIPS

PHILIPS CONSUMER ELECTRONICS COMPANY


Marietta, GA 30060-0026
Meet Philips at the Internet
http://www.usasupport.philips.com
or call
1-888-philips (744-5477)

Be responsible
Respect copyrights

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners.
2005 © Koninklijke Philips Electronics N.V. All rights reserved.

Printed in China

1

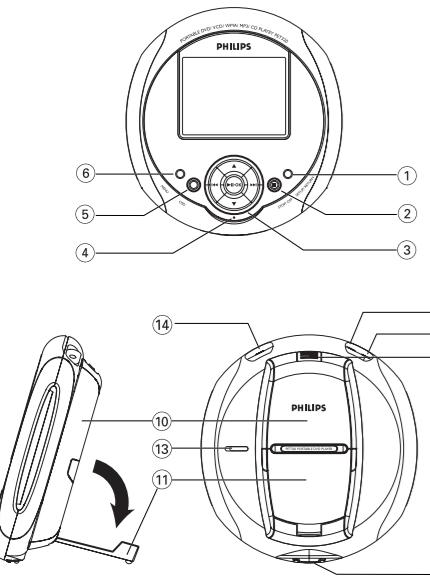

English

FUNCTIONAL OVERVIEW

INTRODUCTION

Digital video

1. SETUP / RETURN Enter the SETUP menu. Work as return key in PBC disc.

2. ■ Press once to Stop playback.

Press twice to power off the set.

Navigation keys

■ OK Play / Pauses / Power ON

▲ / ▼ Down cursor or Up / Down Volume control during playback

◀ / ▶ Left / Right cursor or Previous / Next track or Fast search Forward / backward

LED Indicator Light

During charging, the LED is RED. When the device is fully charged, the LED is GREEN.

OSD

Enter the On Screen Display playback function settings

MENU

Display the DVD disc menu

Headphone jack

For headphone listening

AV OUT

For TV connection

Battery Release

Press to take out the battery pack

Rechargeable Battery Pack

Pull down to pop-up the set for viewing

Open disc compartment to insert or remove disc

HOLD

Lock or unlock the buttons

DC IN 5V

Power supply socket

QUICK START UP

ADVANCED FUNCTIONS

Setup

To maximize your playback experience, use SETUP to fine tune your settings. • Press SETUP. A list of features will be shown.

• Use ▲ / ▼ to highlight your selection.

• Use □ / ▶ to enter a sub-menu screen.

• When the cursor highlights the settings, press ■ OK to confirm the settings.

General Setup

OSD Set On Screen Display

Language (OSD language)

Screen Saver Set screen saver ON/OFF

Brightness Set screen brightness level

Color Set screen color richness

Audio Setup

Equalizer Set music equalizer

Setup options Set up options

Key Bleep Set key bleep ON/OFF

Dolby Setup Select Dolby sound options

ADVANCED FUNCTIONS

Video Setup

AV Out Set video output format to TV system

Screen Display Set screen viewing ratio

Preference Setup

PBC disc Set PBC function ON/OFF

Parental Set parental options

Password Change password

Default Restore factory settings

Exit

Exit SETUP menu.

DVD MENU

OSD OPERATIONS

TROUBLESHOOTING

If it appears that the DVD-Video player is faulty, first consult this checklist. It may be that something has been overlooked.

Zoom (JPEG disc)

Zoom image

① Press OSD repeatedly to select ZOOM.

② In Zoom option, press ▲ to zoom the picture.

③ Use ▲ / ▼, ▲, ▼ to move the picture.

④ Press ■ OK to exit the Zoom and continue playback.

⑤ Or press OSD to access other functions, such as Play Mode, Zoom and Program.

Input No

Input the track no. for PBC VCD playback

① In the table of contents, use ▲ / ▼ to input the title number to be played back.

② Use □ / ▶ to go to previous and next page of the content list.

③ Press ■ OK to play the selection.

④ During playback, press and hold the SETUP/RETURN

to return to the table of contents.

Symptom

Remedy

No sound

- Check audio connections. If using a hi-fi amplifier, try another sound source.

Disc can't be played

- Ensure the disc label is facing upwards.

- Clean the disc.

- Check if the disc is defective by trying another disc.

- Check if car adaptor is connected correctly.

- Check the disc for fingerprints and clean with a soft cloth, wipe from centre to edge.

- Sometimes a small amount of picture distortion may appear. This is not a malfunction.

Distorted picture

- Use only discs formatted according to the TV-set used (PAL/NTSC).

Technical Data

Dimensions 14.5 x 15 x 2.7 cm

5.7 x 9.9 x 1 inches

Weight 0.37 kg / 0.80 lb

Power supply 5V, 2A

Power Consumption 10W

Operating temperature range 0 - 50°C (32 - 122°F)

NTSC / PAL / AUTO

20Hz - 20kHz ± 1dB

≥ 80dB

Dynamic range

Output (audio) 0.1W

Load impedance 10kΩ

Video output level 1V 0 ± 20%

Load impedance 75Ω

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

TROUBLESHOOTING

PHILIPS LIMITED WARRANTY ONE (1) YEAR

GENERAL INFORMATION

WARRANTY COVERAGE:

Philips warranty is limited to the terms set forth below.

WHO IS COVERED?

This warranty is extended to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase.

The warranty period begins on the date of purchase for new products or for the date of repair or replacement for products returned for service.

Philips reserves the right to require a proof of purchase or other evidence of ownership to determine the validity of this warranty.

Philips does not extend its warranty coverage to any product which has been damaged by accident, misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.


Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the user.

Philips does not extend its warranty coverage to any product which has been damaged by normal wear and tear, ordinary household use, or normal maintenance and servicing.

Philips does not extend its warranty coverage to any product which has been damaged by misuse, abuse, alteration, modification, negligence, acts of God, fire, flood, lightning, war, or other causes beyond the control of the

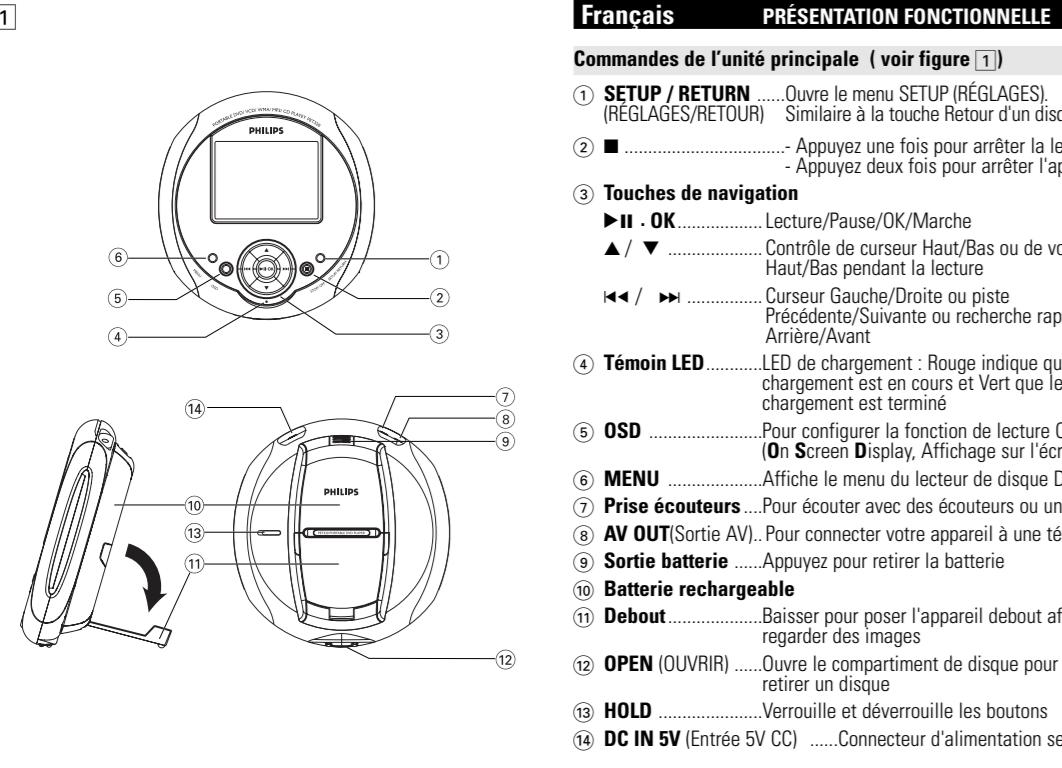

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

L'appareil répond aux normes FCC, Part 15 et 21 CFR 1040.10. Fonctionnement soumis aux deux conditions suivantes :
1. Cet appareil ne doit pas provoquer d'interférences nuisibles.
2. Cet appareil doit accepter toute interférence reçue, y compris les interférences susceptibles de provoquer un fonctionnement peu satisfaisant.

El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10. Funcionamiento dependiente de dos condiciones siguientes:
1. Este aparato no puede provocar interferencia dañina.
2. Este aparato debe aceptar cualquier interferencia recibida, incluyendo las interferencias que pueden provocar un funcionamiento insuficiente.

COPYRIGHT INFORMATION

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

DISPOSAL OF YOUR OLD PRODUCT

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheel bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Français PRÉSENTATION FONCTIONNELLE

Commandes de l'unité principale (voir figure (1))

- ① SETUP / RETURN ...Ouvre le menu SETUP (RÉGLAGES). / Similaire à la touche retour d'un disque DVD.
- ② ■ ...Appuyez une fois pour arrêter la lecture. / Appuyez deux fois pour arrêter l'appareil.
- ③ Touches de navigation
 - II - OKLecture/Pause/OK/Marche
 - ▲ / ■Contrôle de curseur Haut/Bas ou de volume
 - ■Garde/Gauche/Droite ou piste
 - ■ ■Précédente/Suivante ou recherche rapide en avant/arrière
- ④ Témoin LEDIndique que le chargement est en cours et Vert que le chargement est terminé.
- ⑤ OSDPour configurer la fonction de lecture OSD (On Screen Display, Affichage sur l'écran)
- ⑥ MENUAffiche le menu du lecteur de disque DVD
- ⑦ Prise écouteursPour écouter avec des écouteurs ou un casque
- ⑧ AV OUT (Sortie AV)Pour connecter votre appareil à une télévision
- ⑨ Sortie batterieAppuyez pour rebatter la batterie
- ⑩ Batterie rechargeable
- ⑪ DébutBaissez pour poser l'appareil debout afin de regarder des images
- ⑫ OPEN (OUVRIR)Ouvrez le compartiment de disque pour insérer ou retirer un disque
- ⑬ HOLDVerrouille et déverrouille les boutons
- ⑭ DC IN 5V (Entrée 5V CC)Connecteur d'alimentation secteur

INTRODUCTION

Vidéo numérique

La vidéo DVD utilise la meilleure technologie de compression de données MPEG2 pour enregistrer un film entier sur un disque de 12,7 cm. La compression de bits variable du DVD, pouvant atteindre 9,8 Mbit/s, permet de stocker les images les plus complexes sans perdre de sa qualité initiale.

Votre lecteur de DVD portable

Votre lecteur de DVD portable lit les disques vidéo-indigènes conformes au standard universel DVD-Vidéo. Vous pourrez donc graver ce que vous appréciez pleinement les films de long métrage avec une qualité d'image digne du cinéma.

Tous les lecteurs uniques du DVD-Vidéo, comme la sélectrice de la langue de doublage et celle des sous-titres, ainsi que les différents angles de caméra (à nouveau en fonction du disque mis en place) sont toutes disponibles.

La fonction de verrouillage du disque DVD permet aux parents de sélectionner les disques que leurs enfants pourront regarder. Vous constaterez combien votre lecteur est remarquablement facile à utiliser avec les fonctions de contrôle.

Déballage

Ouvrez le boîte et vérifiez que vous disposez de tous les éléments suivants : un lecteur portable DVD, des écouteurs (AY3806), une batterie détachable (AY4838), une housse de transport, un adaptateur d'alimentation CA/CC, un guide d'utilisation, un chargeur de voiture (AY4113).

OPEN (OUVRIR)

Ouvrez le compartiment de disque pour insérer ou retirer un disque

HOLD

Verrouille et déverrouille les boutons

DC IN 5V (Entrée 5V CC)

Connecteur d'alimentation secteur

INTRODUCTION

Positionnement

• Posez le lecteur sur une surface dure et plate.
• Ne placez jamais le lecteur à proximité d'une source de chaleur ni ne l'exposez directement au soleil.
• Si vous l'utilisez à une température élevée, assurez-vous que l'autre source d'alimentation fournit suffisamment d'énergie pour empêcher l'adaptateur secteur et l'appareil.

• Veuillez à ce que le compartiment de disque soit fermement fermé pour éviter que l'adaptateur secteur ne se déplace.

• La lampe bleue se met à clignoter lorsque vous déplacez rapidement l'adaptateur secteur. Ne tirez pas sur le cordon d'alimentation.

Sécurité et Maintenance

• Utilisez toujours un adaptateur secteur, un adaptateur allume-cigares ou un boîtier de piles rechargeables (si tout n'est fourni).

• Contrôlez la tension secteur indiquée sur la plaque signalétique de l'appareil. Si elle est différente de celle de la prise de courant, utilisez un transformateur.

• Ne touchez pas l'adaptateur secteur si vos mains sont mouillées ; vous risquez une électrocution.

• Si vous connectez l'adaptateur secteur à une autre source de courant, assurez-vous que l'adaptateur est identique à celle de la prise.

• La lampe bleue se met à clignoter lorsque vous déplacez rapidement l'adaptateur secteur. Ne tirez pas sur le cordon d'alimentation.

Formats de disque acceptés

Outre les disques DVD-Vidéo, vous pourrez également visionner tous les CD-video et CD audio (y compris les CD-R, CD-RW, DVD-R/RW).

DVD-Vidéo

• Les disques peuvent contenir (film, clips vidéo, série dramatique, etc.), ces disques peuvent comporter un ou plusieurs titres et peuvent être divisés en chapitres. Pour faire passer d'un titre à l'autre, il suffit de choisir le chapitre souhaité.

• Ces disques peuvent comporter un ou plusieurs plages et les plages peuvent présenter un ou plusieurs index, comme une liste de table des matières.

• Les disques peuvent également contenir un volume modéré. Une écoute à un volume élevé peut entraîner l'épuisement de la batterie.

• Les disques peuvent également contenir des pistes musicales. Vous pourrez les lire avec le lecteur DVD.

• Dès que vous avez acheté un disque, veillez à ne pas éjecter les fichiers WMA protégés.

• Remarque : La surface du lecteur chauffeur s'est utilisée pendant une période prolongée.

Cette réaction est normale.

INTRODUCTION

Généralités

Alimentation

L'appareil fonctionne avec un adaptateur secteur, un adaptateur allume-cigares ou un boîtier de piles rechargeables (si tout n'est fourni).

• Contrôlez la tension secteur indiquée sur la plaque signalétique de l'appareil. Si elle est différente de celle de la prise de courant, utilisez un transformateur.

• Ne touchez pas l'adaptateur secteur si vos mains sont mouillées ; vous risquez une électrocution.

• Si vous connectez l'adaptateur secteur à une autre source de courant, assurez-vous que l'adaptateur est identique à celle de la prise.

• La lampe bleue se met à clignoter lorsque vous déplacez rapidement l'adaptateur secteur. Ne tirez pas sur le cordon d'alimentation.

Sécurité et Maintenance

• Ne démontez pas l'appareil car les rayons laser pourraient entraîner des lésions oculaires.

• Toute opération d'entretien doit être effectuée par un personnel qualifié.

• Ne démontez pas l'appareil dans un endroit où il est exposé aux vibrations importantes.

• Ne démontez pas le choc sur le lecteur. Les chocs violents et les vibrations importantes peuvent provoquer des dysfonctionnements.

• Pour éviter que l'appareil ne tombe, ne posez pas de charge sur l'appareil.

• Assurez-vous que l'appareil est correctement branché à une prise de courant.

• Ne démontez pas l'appareil pour éviter tout accident ; il contient des parties à haute tension.

• Ne pas exposer l'appareil à une chaleur excessive causée par un appareil de chauffage ou un autre appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Si l'appareil est étanche, n'oubliez pas de débrancher l'appareil de la prise de courant.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.

• Ne pas démonter l'appareil si l'eau a pénétré dans l'appareil.